


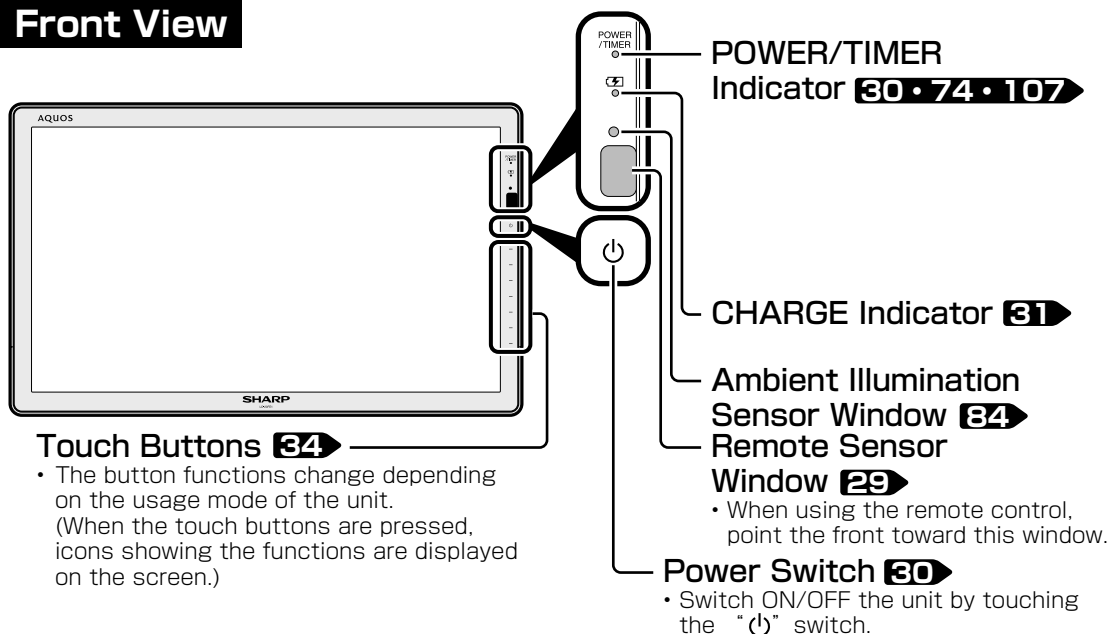
English Guide

Part Names


- The numbers shown in the  symbols are the page numbers where part functions and/or use are explained in Japanese.

Display Unit

Front View




Rear View

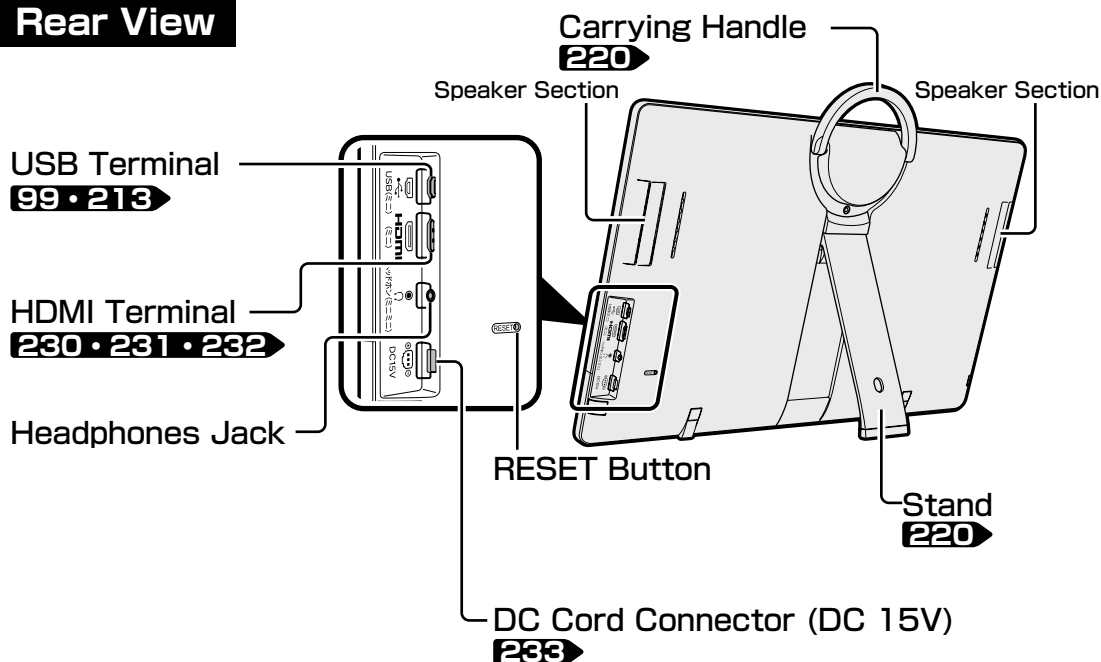


Tuner Unit

Front View

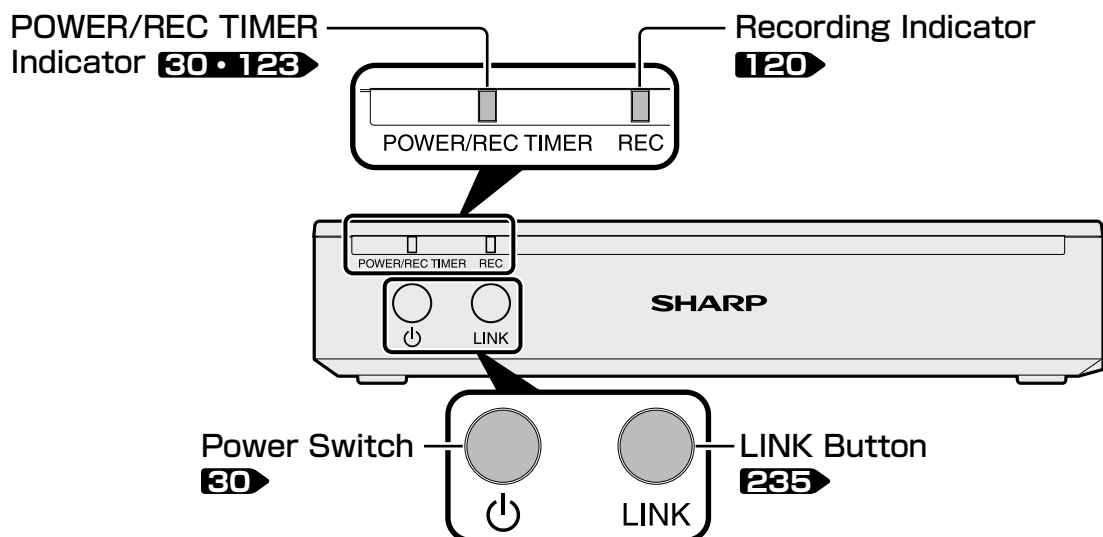

Rear View

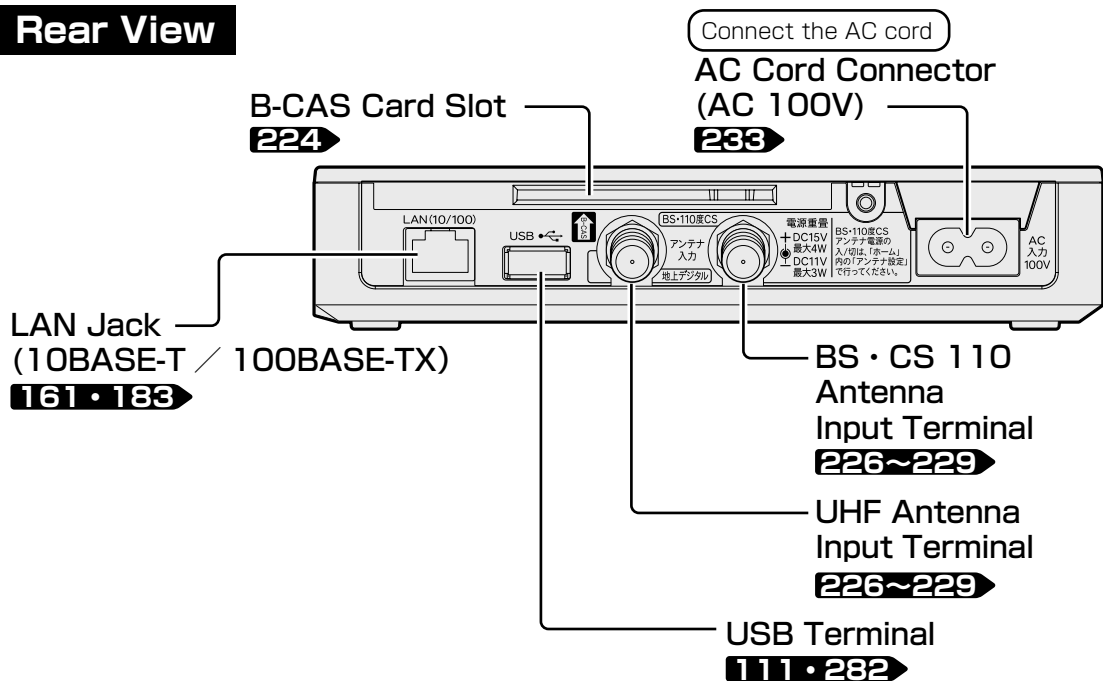

Remote Control Unit

Volume Up(+)/ Down(-) **48・188**

- Press to adjust the volume.

My Circle **38~41**

- Press to display "My Circle".

Display the Tool Menu **42・47**

Cursor (up, down, left, right)/ Jog Dial Section

- See the below.

Finish

- Press to finish a menu operation, etc.

Number Key Button **101**

- Press to display the number key panel when inputing number.

Color Buttons

- Use to operate EPGs and data program screens.

Active/Standby **30・234**

- Press to turn on the TV set in active or standby mode.

Channel Up(Δ)/ Down(∇) **48・188**

- Press to select channels in ascending or descending order.
- ※CATV channels are factory set to be skipped.

Enter/Confirm

- Press to confirm a selected setting or menu item.

Display the "Home" Menu **42~43**

- Press to start some useful TV functions.

Return

- Press to go back to the previous screen.


Linked Data Broadcast **52・189**

- Press to show the data broadcast linked with the current digital TV program.

EPG **59・60**


- Press to display or turn off the Electronic Program Guide (EPG: 番組表) when receiving a digital broadcast.

Cursor and Jog Dial Section

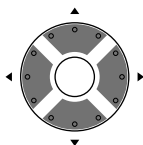

Cursor (up, down, left, right)

 - Use to select a menu item, column, etc.



Jog Dial

- Turn to use.
- Can be used for "My Circle", program selection, etc. **38・49**
- Can be used in place of the cursor in some cases.

English
GuideEnglish
Guide

- 307